

Dräger REGARD configuration software Dräger REGARD interface card

The new Dräger REGARD configuration software allows safe and fast parameterization and documentation of Dräger REGARD systems.



ST-1162-2008

APPLICATION

Dräger REGARD configuration software enables you to download the configuration of an existing Dräger REGARD system and store it in electronic form or print it out for documentation purposes. The integrated comparison function allows quick and automatic comparison of the configuration stored on the PC and the system configuration.

In addition, you can also create and store system configurations in offline mode. These configurations can then be transferred to the Dräger REGARD system, for example while commissioning.


The software supports replacement of defective cards and thus reduces the time that has to be spent on re-configuration and testing.

SYSTEM REQUIREMENTS

The Dräger REGARD system must be equipped with a master card and an interface card. The Dräger REGARD interface card is connected to the PC via a USB port. The PC operating system can be Windows 2000, Windows XP or Windows Vista.

APPROVAL

DEKRA Exam has tested the Dräger REGARD interface card and the Dräger REGARD configuration software and confirmed that they can be used on performance approved systems.

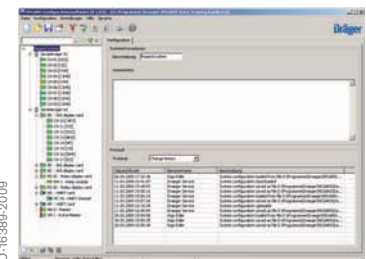

D-16389-2009

Dräger REGARD configuration software



D-12700-2009

Dräger REGARD interface card

SYSTEM REQUIREMENTS FOR THE DRÄGER REGARD CONFIGURATION SOFTWARE

Operating systems	Windows 2000
	Windows XP
	Windows Vista

TECHNICAL DATA FOR THE DRÄGER REGARD INTERFACE CARD

Operating conditions	
Temperature	0 to + 55 °C
Humidity	0 to 90 % relative humidity, non-condensing
Vibration	Acc. to 60079-21-1
Voltage range	18 – 30 VDC
Power consumption	90 mA max. (at 24 VDC)
Approvals	DMT 02 ATEX G 002 X
Interface	USB 2.0 (USB 1.1-compatible)

ORDER INFORMATION

Dräger REGARD interface card (incl. configuration software and USB cable)	8322990
---	---------



HEADQUARTERS

Dräger Safety AG & Co. KGaA
Revalstrasse 1
23560 Lübeck, Germany

www.draeger.com

SYSTEM CENTERS

P. R. CHINA

Beijing Fortune Draeger Safety
Equipment Co., Ltd.
A22 Yu An Rd, B Area,
Tianzhu Airport Industrial Zone,
Shunyi District, Beijing 101300
Tel +86 10 80 49 80 00
Fax +86 10 80 49 80 05

GERMANY

Dräger Safety AG & Co. KGaA
Revalstrasse 1
23560 Lübeck
Tel +49 451 882-2794
Fax +49 451 882-4991

FRANCE

Dräger Safety France SAS
3c route de la Fédération, BP 80141
67025 Strasbourg Cedex 1
Tel +33 3 88 40 59 29
Fax +33 3 88 40 76 67

SINGAPORE

Draeger Safety Asia Pte Ltd
67 Ayer Rajah Crescent #06-03
Singapore 139950
Tel +65 68 72 92 88
Fax +65 65 12 19 08

UNITED KINGDOM

Draeger Safety UK Ltd.
Blyth Riverside Business Park
Blyth, Northumberland NE24 4RG
Tel +44 1670 352 891
Fax +44 1670 544 475

USA

Draeger Safety, Inc.
505 Julie Rivers, Suite 150
Sugar Land, TX 77478
Tel +1 281 498 10 82
Fax +1 281 498 51 90