

# Dräger TO 7000



ST-4495/2005

By using the tube opener Dräger TO 7000, conventional short-term detector tubes as well as ampoule and double tubes can be opened with only simple movements and no jagged edges are left behind. The Dräger TO 7000 also offers several other functions that perfectly support the use of the complete Dräger-Tube product line.

### Safe and easy handling

Opening the Dräger-Tubes by breaking off both ends has become much easier and safer than in the past. A slight turn of the tube is all that is needed in order to score the tip against three metal discs in the upper opening and then to break off the tip.

The Dräger TO 7000 is especially designed to prevent glass from falling out of the opener by accident. The reservoir for the broken-off tips is easy to empty. A hand strap makes carrying the opener easier and allows the Dräger TO 7000 to be combined with the Dräger accuro hand pump.

It is now even easier to open ampoule tubes and double tubes joined by shrink tubing. They can be opened using the breaking platform located in the lower part of the opener. It is impossible to damage the protective tubing by applying too much pressure because the angle of the break is exactly calculated.

### Additional benefit

The Dräger-Tubes can be read easily using the white scale on the Dräger TO 7000. This reduces the likelihood of incorrect readings and inaccuracies. The opener is made of chemical-resistant and electrically conductive material.

ST-1990-2005





**Dräger TO 7000:**  
Safe and easy handling.

## ORDER INFORMATION



Dräger TO 7000

64 01 200


## OPENING DRÄGER SHORT-TERM TUBES

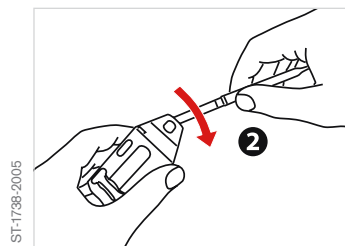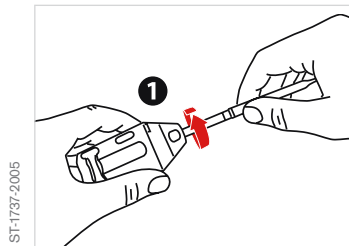


## OPENING DRÄGER AMPOULE AND DOUBLE TUBES

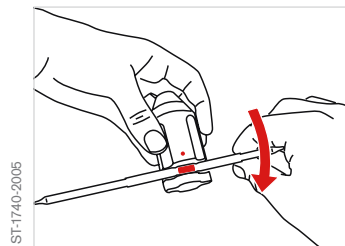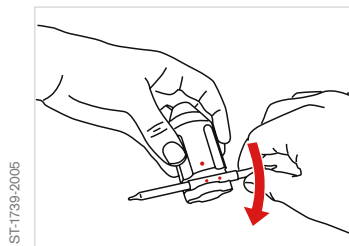

## EMPTYING THE TUBE OPENER

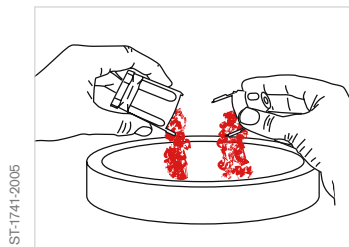

## CONNECTING THE OPENER TO THE DRÄGER ACCURO HAND PUMP

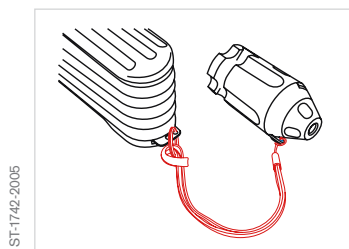

## SUBSIDIARIES

### AUSTRALIA

Draeger Safety Pacific Pty. Ltd.  
Axxess Corporate Park  
Mt. Waverley. Vic 3149  
Tel +61 3 92 65 50 00  
Fax +61 3 92 65 50 95

### CANADA

Draeger Canada Ltd.  
7555 Danbro Crescent  
Mississauga, Ontario L5N 6P9  
Tel +1 905 821 8988  
Fax +1 905 821 2565

### P. R. CHINA

Beijing Fortune Draeger  
Safety Equipment Co., Ltd.  
Beijing 101300  
Tel +86 10 80 49 80 00  
Fax +86 10 80 49 80 05

### FRANCE

Dräger Safety France S.A.S.  
3c, Route de la Fédération  
67025 Strasbourg Cedex  
Tel +33 388 40 76 76  
Fax +33 388 40 76 67

### MEXICO

Draeger Safety S.A. de C.V.  
Av. Peñuelas No. 5  
Querétaro, Qro México  
Tel +52 442 246 1113  
Fax +52 442 246 1114

### NETHERLANDS

Dräger Safety Nederland B.V.  
Edisonstraat 53  
2700 AH Zoetermeer  
Tel +31 79 344 46 66  
Fax +31 79 344 47 90

### SINGAPORE

Draeger Safety Asia Pte. Ltd.  
67 Ayer Rajah Crescent # 06 03  
139950 Singapore  
Tel +65 68 72 92 88  
Fax +65 67 73 20 33

### REP. OF SOUTH AFRICA

Dräger South Africa (Pty) Ltd.  
P.O.Box 68601  
Bryanston 2021  
Tel +27 11 465 99 59  
Fax +27 11 465 69 53

### SPAIN

Draeger Safety Hispania S.A.  
Calle Xaudaró 5  
28034 Madrid  
Tel +34 91 728 34 00  
Fax +34 91 729 48 99

### UNITED KINGDOM

Draeger Safety UK Ltd.  
Kitty Brewster Industrial Estate  
Blyth, Northumberland NE24 4RG  
Tel +44 1670 352 891  
Fax +44 1670 356 266

### USA

Draeger Safety, Inc.  
101 Technology Drive  
Pittsburgh, PA 15275  
Tel +1 412 787 8383  
Fax +1 412 787 2207

Dräger Safety AG & Co. KGaA  
Revalstrasse 1  
23560 Luebeck, Germany  
Tel +49 451 882 0  
Fax +49 451 882 2080  
[www.draeger-safety.com](http://www.draeger-safety.com)